

62TE

Lubrication

The 62TE requires the use of +4 Oil. There are many different blends of oil that meet the +4 requirement (markings for +4 are clear on the labels).

During a service the 62TE fill is 5.5 qts 5.2 L



After an internal transmission repair the 62TE fill is 9.0 qts 8.5 L



62TE

Checking the Fluid Level

When checking the fluid level it is important to be on level ground and using a scan tool, verify transmission temperature. Use the chart below to properly fill the unit with Miller Tool 9336 (wire stick). Markings on the gauge bar are separated by 10mm each indicator.

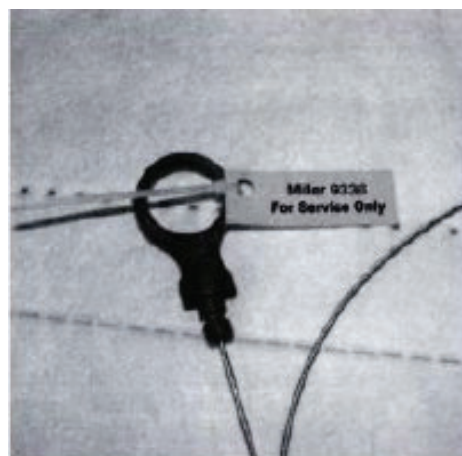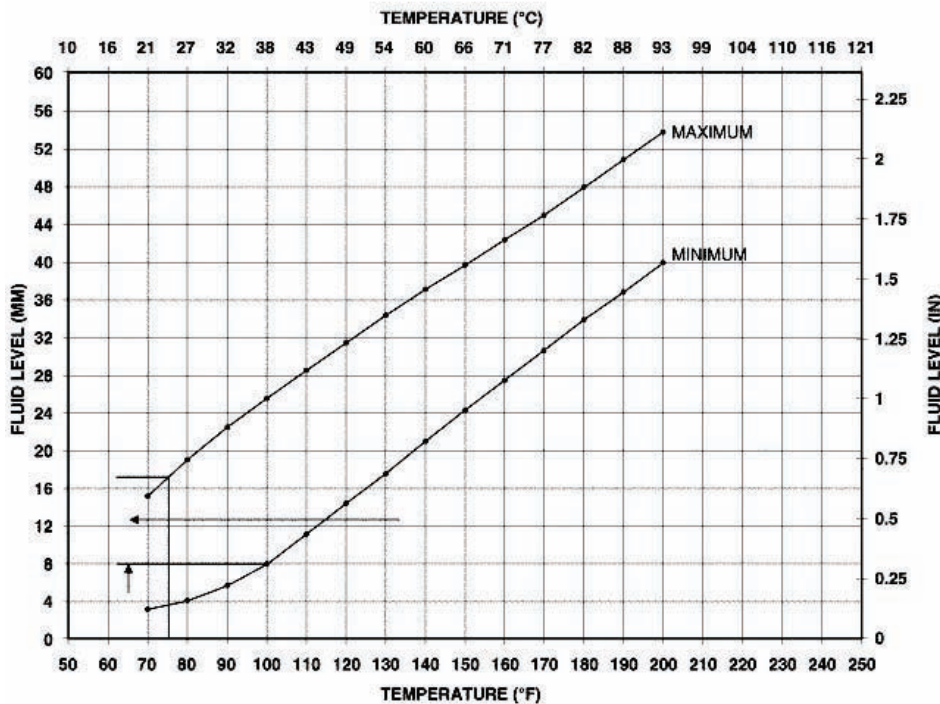

**Tool 9336 Service Dipstick
(10 mm separations)**

